

Game Controller Super Converters

Magic stick X1-BK

Xbox 360/ Xbox One ↔ Xbox One Controller Adapter

 
透過 USB 介面連接 Xbox One 或 PC 主機。



連接 Xbox 360 / Xbox One 有線手把即可使用，同時也支援 Xbox 360 / Xbox One 相關週邊裝置。

step.1
將 Game Controller Super Converters 連接到 Xbox One 主機的 USB 連接埠。


step.2
Xbox 360 手把透過 USB 線與 Game Controller Super Converters 連接後，待手把 Player 指示燈任一燈號亮起 (或確認手把能用有線操控的方式對應主機功能)，即表示與 Game Controller Super Converters 註冊完成。

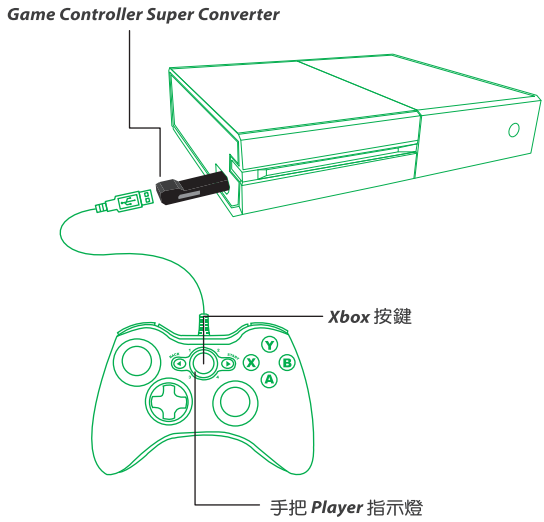

- 每個 Super Converter 一次僅能對應一支 Xbox 360 手把進行控制。
- Win7 以上系統請安裝微軟 Xbox One 驅動程式即可使用，Win7 以下系統不支援。

可自動判斷 Xbox 360 手把與方向盤功能，不需要 (撥動開關) 設定，自動對應 Xbox One 按鍵功能。

 按鍵功能定義方式如下：

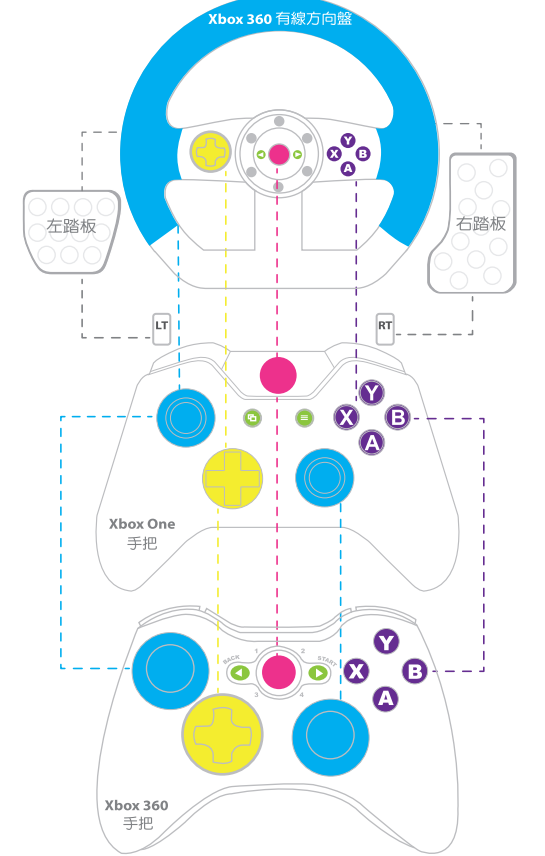


Xbox One 手把	Xbox 360 手把	Xbox 360 有線方向盤
DPad-UP	DPad-UP	DPad-UP
Dpad-Down	Dpad-Down	Dpad-Down
DPad-Left	DPad-Left	DPad-Left
Dpad-Right	Dpad-Right	Dpad-Right
A	A	A
B	B	B
X	X	X
Y	Y	Y
Menu	Start	Start
View	Back	Back
Lx	Lx	Lx
Ly	Ly	--
Rx	Rx	--
Ry	Ry	--
LB	LB	LB
RB	RB	RB
LT	LT	LT
RT	RT	RT
L3	L3	--
R3	R3	--
Xbox Key	Xbox Key	Xbox Key

Turbo 使用設定步驟：

step.1
將手把按住 Xbox 鍵 + BACK 鍵進入設定模式。



 step.2
按住 BACK 鍵不放，再選擇想要連發的按鍵，可選擇一個或是多個按鍵。

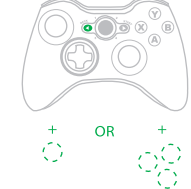

step.3
按下 START 鍵後，設置完畢。



step.4
按下 Xbox 鍵，退出模式。



清除全部 Turbo 使用設定步驟：

step.1
將手把按住 Xbox 鍵 + BACK 鍵進入設定模式。



step.2
再同時按下 BACK 鍵 + START 鍵，即可將設定全部清除。



step.3
按下 Xbox 鍵，退出模式。



更多詳細操作請上官網查詢
www.brookaccessory.com

Remap Key/Custom Buttons 使用設定步驟：

step.1
將手把按住 Xbox 鍵 + START 鍵進入設定模式。



step.2
轉移單一按鍵功能 (舉例：要將B鍵功能轉換到X鍵使用)



step.3
按下 Xbox 鍵，退出模式。

單一按鍵功能轉移到複數鍵 (舉例：要將B鍵功能轉換到Y、X、A三鍵使用)



更多詳細操作請上官網查詢
www.brookaccessory.com

清除全部Remap Key/Custom Buttons 使用設定步驟：

step.1
將手把按住 Xbox 鍵 + START 鍵進入設定模式。



step.2
再同時按下 BACK 鍵 + START 鍵，即可將設定全部清除。



step.3
按下 Xbox 鍵，退出模式。



更多詳細操作請上官網查詢
www.brookaccessory.com

Game Controller Super Converters

Magic stick X1-BK

Xbox 360/ Xbox One ↔ Xbox One Controller Adapter

 
透過 USB 接口連接 Xbox One 或 PC 主機。



連接 Xbox 360 / Xbox One 有線手柄即可使用，同時也支持 Xbox 360 / Xbox One 相關周邊裝置。

step.1
將 Game Controller Super Converters 連接到 Xbox One 主機的 USB 連接埠。


step.2
Xbox 360 手柄透過 USB 線與 Game Controller Super Converters 連接後，待手柄 Player 指示燈任一燈號亮起 (或確認手柄能用有線操控的方式對應主機功能)，即表示與 Game Controller Super Converters 註冊完成。

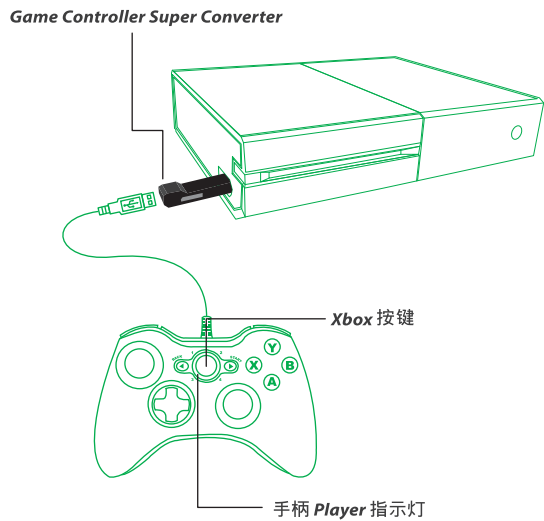

- 每個 Super Converter 一次僅能對應一支 Xbox 360 手柄進行控制。
- Win7 以上系統請安裝微軟 Xbox One 驅動程式即可使用，Win7 以下系統不支持。

可自動判斷 Xbox 360 手柄與方向盤功能，不需要 (撥動開關) 設定，自動對應 Xbox One 按鍵功能。

 按鍵功能定義方式如下：

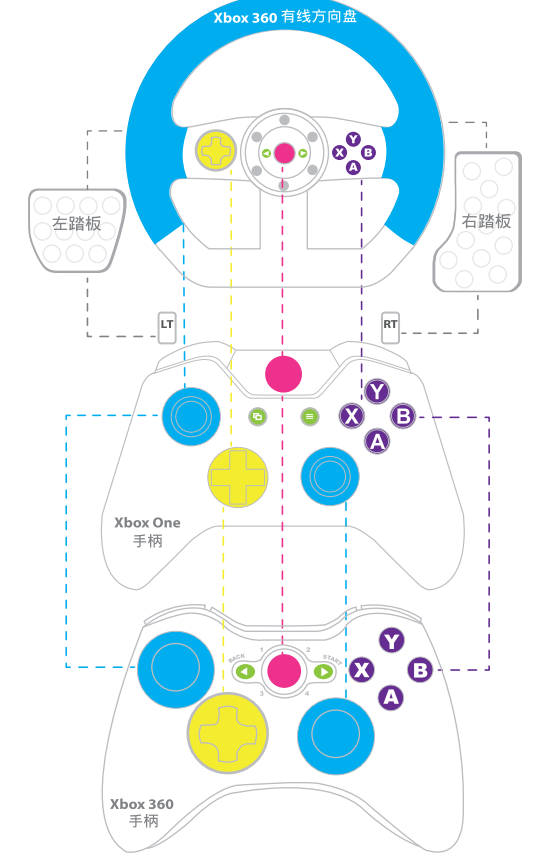


Xbox One 手柄	Xbox 360 手柄	Xbox 360 有線方向盤
DPad-UP	DPad-UP	DPad-UP
Dpad-Down	Dpad-Down	Dpad-Down
DPad-Left	DPad-Left	DPad-Left
Dpad-Right	Dpad-Right	Dpad-Right
A	A	A
B	B	B
X	X	X
Y	Y	Y
Menu	Start	Start
View	Back	Back
Lx	Lx	Lx
Ly	Ly	--
Rx	Rx	--
Ry	Ry	--
LB	LB	LB
RB	RB	RB
LT	LT	LT
RT	RT	RT
L3	L3	--
R3	R3	--
Xbox Key	Xbox Key	Xbox Key

Turbo 使用設定步驟：

step.1
將手柄按住 Xbox 鍵 + BACK 鍵進入設定模式。



 step.2
按住 BACK 鍵不放，再選擇想要連發的按鍵，可選擇一個或是多個按鍵。

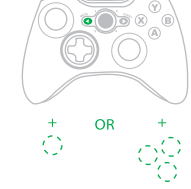

step.3
按下 START 鍵後，設置完畢。



step.4
按下 Xbox 鍵，退出模式。



清除全部 Turbo 使用設定步驟：

step.1
將手柄按住 Xbox 鍵 + BACK 鍵進入設定模式。



step.2
再同時按下 BACK 鍵 + START 鍵，即可將設定全部清除。



step.3
按下 Xbox 鍵，退出模式。



更多詳細操作請上官網查詢
www.brookaccessory.com

Remap Key/Custom Buttons 使用設定步驟：

step.1
將手柄按住 Xbox 鍵 + START 鍵進入設定模式。



step.2
轉移單一按鍵功能 (舉例：要將B鍵功能轉換到X鍵使用)



step.3
按下 Xbox 鍵，退出模式。

單一按鍵功能轉移到複數鍵 (舉例：要將B鍵功能轉換到Y、X、A三鍵使用)



更多詳細操作請上官網查詢
www.brookaccessory.com

清除全部Remap Key/Custom Buttons 使用設定步驟：

step.1
將手柄按住 Xbox 鍵 + START 鍵進入設定模式。



step.2
再同時按下 BACK 鍵 + START 鍵，即可將設定全部清除。



 
step.3
按下 Xbox 鍵，退出模式。



更多詳細操作請上官網查詢
www.brookaccessory.com


Game Controller Super Converters

Xbox 360/ Xbox One ↔ Xbox One Controller Adapter

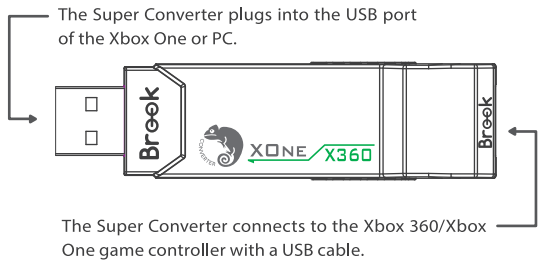


step.1
Connect the Super Converter to the USB port of the Xbox One.

 step. 2
Connect the Xbox 360 game controller to the Super Converter via a standard USB cable. The registration of the controller starts automatically and finishes when the port indicator light on the controller turns on or when pushing a button triggers a response on the screen.

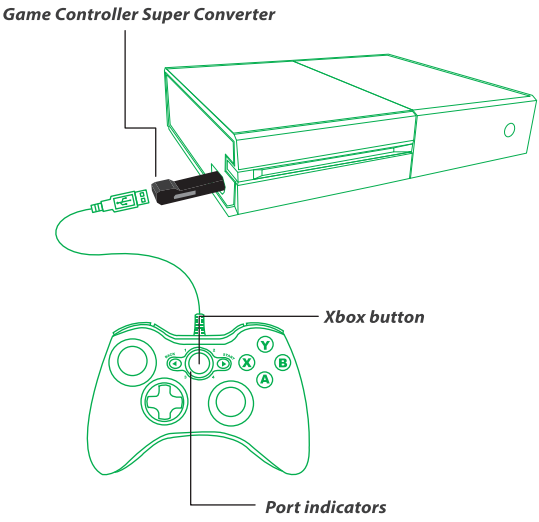

- Each Super Converter can handle one Xbox 360 game controller at a time.
- To use the Super Converter with a PC running on Windows 7 please install the original Xbox One driver from Microsoft. Older operating systems are not supported.

 The Super Converter automatically recognizes Xbox 360 gamepads and racing wheels and auto-configures their buttons for use with the Xbox One.

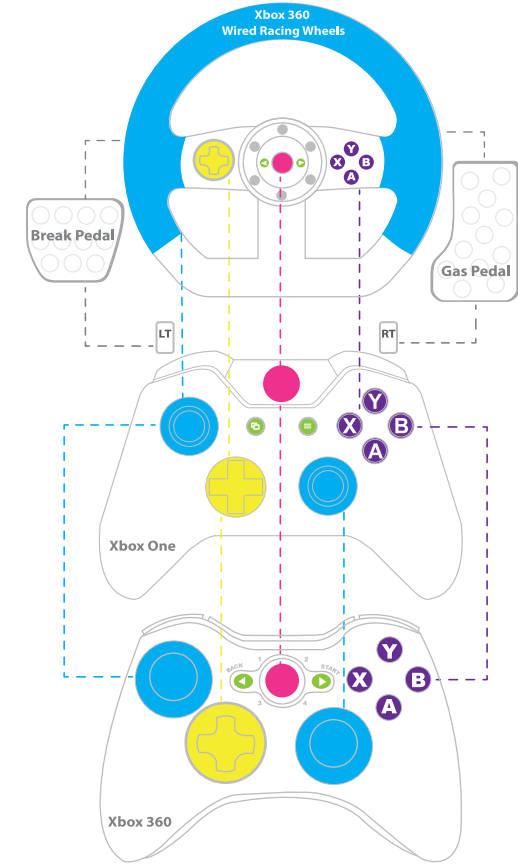

Xbox One Gamepad	Xbox 360 Gamepad	Xbox 360 Wired Racing Wheel
Dpad-UP	Dpad-UP	Dpad-UP
Dpad-Down	Dpad-Down	Dpad-Down
Dpad-Left	Dpad-Left	Dpad-Left
Dpad-Right	Dpad-Right	Dpad-Right
A	A	A
B	B	B
X	X	X
Y	Y	Y
Menu	Start	Start
View	Back	Back
Lx	Lx	Lx
Ly	Ly	--
Rx	Rx	--
Ry	Ry	--
LB	LB	LB
RB	RB	RB
LT	LT	LT
RT	RT	RT
L3	L3	--
R3	R3	--
Xbox Key	Xbox Key	Xbox Key

Procedure for assigning a Turbo button

step.1
Press the Xbox GUIDE and the BACK buttons at the same time to enter the settings mode.



step. 2
Press the BACK button to select which button you want to use for the turbo function. A single button or a combination of buttons can be chosen.



step. 3
Press the START button to complete the setting.



step. 4
Press the Xbox GUIDE button to exit the settings mode.



Procedure for clearing a Turbo button assignment

step.1
Press the Xbox GUIDE and BACK buttons at the same time to enter the settings mode.



step. 2
Press the BACK and START buttons at the same time to clear the current setting.



step. 3
Press the Xbox GUIDE button to exit the settings mode.



For more details please visit our official website at www.brookaccessory.com

Procedure for customizing buttons

step.1
Press the Xbox GUIDE and START buttons at the same time to enter the settings mode.



step. 2
Transfer a function from one button to another.
(Example: You want to use X to do what B does now.)

1. Press the B button.
2. Press and hold BACK, then press the X button.
3. Press START to complete the setting.



Transfer a function from one button to multiple buttons.
(Example: You want to use A, Y or X to do what B does now.)

1. Press the B button.
2. Press and hold BACK, then press A, Y and X one by one (any sequence will do).
3. Press START to complete the setting.



step. 3
Press the Xbox GUIDE button to exit the settings mode.



Procedure for resetting all customizing buttons

step.1
Press the Xbox GUIDE and START buttons at the same time to enter the settings mode.



step. 2
Press the BACK and START buttons at the same time clear all settings.



step. 3
Press the Xbox GUIDE button to exit the settings mode.



FCC Statement:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.